

ADJUSTMENT ON GAME PC BOARD (EURO CHAMP G25 00679A)

3P CONNECTOR

1	COIN 3
2	3P SELECT
3	3P LEFT
4	3P RIGHT
5	3P UP
6	3P DOWN
7	3P A-BUTTON
8	3P B-BUTTON
9	
10	
11	SERVICE
12	COIN METER 3
13	LOCKOUT 3
14	GND
15	GND

M2 CONNECTOR

1	VIDEO-RED
2	VIDEO-GREEN
3	VIDEO-BLUE
4	VIDEO-SYNC
5	VIDEO-GND

4P CONNECTOR


1	COIN 4
2	4P SELECT
3	4P LEFT
4	4P RIGHT
5	4P UP
6	4P DOWN
7	4P A-BUTTON
8	4P B-BUTTON
9	
10	
11	
12	COIN METER 4
13	LOCKOUT 4
14	GND
15	GND

S-CONNECTOR

1	SOUND (+)
2	SOUND (-)
3	

G-CONNECTOR (JAMMA)

SOLDER SIDE		COMPONENTS SIDE
GND	A	1 GND
GND	B	2 GND
+5V	C	3 +5V
+5V	D	4 +5V
-5V	E	5 -5V
+12V	F	6 +12V
POST	H	7 POST
COIN METER 2	J	8 COIN METER 1
SPEAKER LOCKOUT 2	K	9 COIN LOCKOUT 1
SPEAKER (-)	L	10 SPEAKER (+)
SOUND GND	M	11 SOUND
VIDEO G	N	12 VIDEO R
VIDEO SYNC	P	13 VIDEO B
SERVICE SW	R	14 VIDEO GND
TILT SW	S	15
COIN 2	T	16 COIN 1
2P SELECT	U	17 1P SELECT
2P UP	V	18 1P UP
2P DOWN	W	19 1P DOWN
2P LEFT	X	20 1P LEFT
2P RIGHT	Y	21 1P RIGHT
2P A-BUTTON	Z	22 1P A-BUTTON
2P B-BUTTON	a	23 1P B-BUTTON
	b	24
	c	25
GND	e	27 GND
GND	f	28 GND

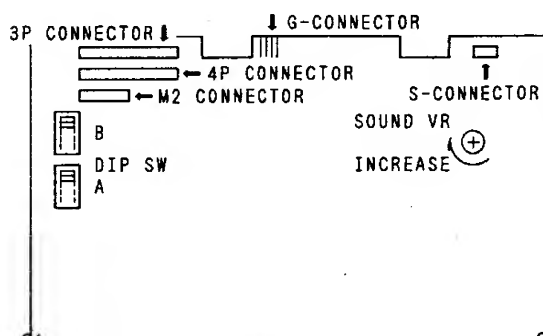

☆ CONTROL OF THIS GAME USES ONE 8-WAY JOYSTICK AND TWO BUTTONS.

NOTE) BEFORE CHANGING THE SETTING OF DIP SWITCH, TURN THE POWER OFF.

◇ SETTING OF DIP SWITCH-A

(*):FACTORY SETTING

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
GAME OVER-TYPE IN VS GAME	* BOTH TEAMS' GAME ARE OVER	OFF							
	LOST TEAM'S GAME IS OVER	ON							
SCREEN ROTATION	* NORMAL		OFF						
	REVERSE		ON						
TEST MODE	* NORMAL GAME			OFF					
	TEST MODE			ON					
ATTRACT SOUND	* WITH				OFF				
	WITHOUT				ON				
PLAY PRICING COIN A	* 1 COIN 1 PLAY					OFF			
	2 COINS 1 PLAY					ON	OFF		
	3 COINS 1 PLAY					OFF			
	4 COINS 1 PLAY					ON	ON		
PLAY PRICING COIN B	* 1 COIN 2 PLAYS							OFF	OFF
	1 COIN 3 PLAYS							ON	
	1 COIN 4 PLAYS							OFF	
	1 COIN 6 PLAYS							ON	ON

◇ SETTING OF DIP SWITCH-B

SETTINGS	POSITIONS	1	2	3	4	5	6	7	8
GAME DIFFICULTY EASY (A) → DIFFICULT (D)	* RANK B	OFF	OFF						
	RANK A	ON							
	RANK C	OFF	ON						
	RANK D	ON							
LENGTH OF PERIOD	* 2 MIN.			OFF					
	3 MIN.			ON	OFF				
	2.5 MIN.			OFF					
	1.5 MIN.			ON	ON				
GAME TYPE	* 2P GAME					OFF			
	4 SLOTS 4P GAME					ON	OFF		
	2P GAME × 2					OFF			
	2 SLOTS 4P GAME					ON	ON		
CONTINUE	* WITH							OFF	
	WITHOUT							ON	

EURO CHAMP

© TAITO CORP. 1992



92

8-WAY
JOYSTICK



A-BUTTON



B-BUTTON



	DEFENSE	OFFENSE
A-BUTTON	SHOOT	SLIDING
B-BUTTON	PASS	ROUGH PLAY (PUNCH, KICK, etc.)




SUPER TECHNIQUES



CYHOLDING

USE THIS FOR AVOIDING AUTO-
MATICALLY OPPONENTS SLIDING!!

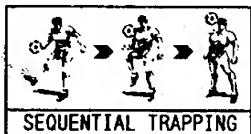

SEQUENTIAL TRAPPING

KEEP THE A-BUTTON PRESSED
WITHOUT TURNING THE JOYSTICK!!



HEEL KICKING

PRESS THE B-BUTTON IN FRONT
OF AN OPPONENT!!



BACK HEEL PASSING

TURN THE JOYSTICK TO THE
REVERSE DIRECTION AND PRESS
THE B-BUTTON!!



VARIOUS KINDS OF SHOOTINGS

IT CHANGES DEPENDING OF THE TURNING DIRECTION OF THE JOY-
STICK! MAKE SURE OF THE OTHER SHOOTING BY YOURSELF!!



OVER HEAD KICKING

SHOOT THE BALL TO THE BACK
DIRECTION!!



JUMPING VOLLEY

DIRECTLY VOLLEY-KICK, WHILE
JUMPING HORIZONTALLY!!

SELECTION METHOD WHEN A MULTI-PLAYER GAME IS PLAYED

★WHEN SELECTING DIFFERENT NATIONAL FLAGS,
A PLAYER-AGAINST-PLAYER GAME CAN BE PLAYED!

★WHEN SELECTING A SAME NATIONAL FLAG,
A COMPETING-AGAINST-COMPUTER GAME CAN BE PLAYED!

TAITO
TAITO CORPORATION

G35 00446A